

PANASONIC

Panasonic KX-TA624 / 824 Telephone System

Changing the time on a Panasonic KX-TA624 system must be done from extension # 101 using a display phone.

- 1.- Press the "PROGRAM" button on the face of the phone
- 2.- Enter programming mode by pressing "STAR" - "POUND" - "1234" (default password = 1234)
- 3.- Enter program # 000
- 4.- Press "SPEAKER" button
- 5.- Press "FORWARD/DND" button to change to the hour selection
- 6.- Press "TRANSFER" button and enter the hour
- 7.- Press "FORWARD/DND" button to change to the minutes parameter
- 8.- Press "TRANSFER" button and enter the minutes
- 9.- Press "FORWARD/DND" button to change to the AM/PM parameter
- 10 Press "MUTE" button to select AM or PM
- 11.- Press "STORE" button (listen for 1 tone if procedure was executed correctly / 3 tones if procedure failed)
- 12.- Press "HOLD" button
- 13.- Press the "PROGRAM" button on the face of the phone

Panasonic KX-TVS Voice Mail System

Changing the time on a Panasonic KX-TVS voice mail system can be done from any phone.

- 1.- Dial the TVS pilot number (extension 107 or 115)
- 2.- When the voice mail system answers press "#" + "6" + "STAR"
- 3.- Log into the message manager's mailbox (999)
- 4.- Press "6" for other features
- 5.- Press "3" to set the time & date
- 6.- Press "1" to change the current time (press "0" for help)
- 7.- Enter the hour then press "#" or enter the hour and minutes then press "#"
- 8.- Press "1" for AM or "2" for PM
- 9.- Press "2" to accept the new time

Panasonic Time Set KXT-61610 KSU

KX-T61610

- 1.- Use phone with intercom number 11. It will change the time for all phones.
- 2.- Keep handset down and press INTERCOM button.
- 3.- Dial 77.
- 4.- Dial the hour, with two digits (e.g. 03 for 3 o'clock).
- 5.- Dial the minutes, with two digits (e.g. 07 if it is now 7 minutes after the hour).
- 6.- Dial 0 for AM or 1 for PM.
- 7.- Press #.
- 8.- Press SP-PHONE

Panasonic Digital Telephone System

Changing the time on a Panasonic digital system can be done from any display phone.

- 1.- Enter programming mode by pressing "PAUSE" then "STAR" button twice, followed by 1, 2, 3, 4
- 2.- Enter program # "000"
- 3.- Press "SPEAKER" button
- 4.- Press "FORWARD/DND" button to change to the hour selection
- 5.- Press "TRANSFER" button and enter the hour
- 6.- Press "FORWARD/DND" button to change to the minutes parameter
- 7.- Press "TRANSFER" button and enter the minutes
- 8.- Press "FORWARD/DND" button to change to the AM/PM parameter
- 9.- Press "MUTE" button to select AM or PM
- 10.- Press "STORE" button
- 11.- Press "HOLD" button
- 12.- Lift and replace handset

Panasonic DBS System

From the designated attendant console (usually x100, but not always), enter the following code sequence:

To set the date and time:

- 1.- Press the ON/OFF key
 - The phone issues intercom dial tone.
 - The current date and time are displayed on your LCD.
 - 2.- Press the PROG key.
"F" appears on the display
 - 3.- Dial "##."
"Program Mode:" appears on the first line of the display;
"MAIN MODE" appears on the second line.
 - 4.- Press the FF1 key.
"SELECT SUB MODE" appears on the second line of the display.
 - 5.- Dial "1#."
"1:DATE 2:TIME" appears.
 - 6.- Dial "1#."
"MONTH/DAY/YEAR" appears.
 - 7.- Enter six digits for the month, day, and year.
For example, to set the date to March 3, 1993, enter "030393."
 - 8.- Press #.
"TIME SET MODE" appears on the display.
 - 9.- Enter four digits for hours and minutes (24-hr. time).
For example, for 11:00 a.m., enter "1100."
 - 10.- Press #.
 - 11.- Press the ON/OFF key.
- The new date and time appear on the display

Panasonic Digital Telephone System

Changing the time on a Panasonic KX-TD, KX-TDA or KX-TDE digital system can be done from any display phone.

- 1.- Enter programming mode by pressing "PROGRAM" button then "STAR" button twice, followed by 1, 2, 3, 4
- 2.- Enter program "000" and press Enter
- 3.- Press "SPEAKER" button two times, you will see the time.
- 4.- Enter the correct hour.
- 5.- Press "FORWARD/DND" button to advance to the minute selection
- 6.- Enter the correct minutes (if necessary to update).

- 7.- Press "FORWARD/DND" button to advance to the AM/PM selection.
- 8.- Press "MUTE" button to select AM or PM (if necessary to change).
- 9.- Press "STORE" button
- 10.- Lift and replace handset to exit the programming mode.
- 11.- This will change the time for all of the phones on your phone

How to set the time on your Panasonic Voice Mail

- Press the intercom button on your phone.
- Dial 165 and then raise the handset.
- When the Voice Mail answers you, dial # 6 (POUND SIX)
- Dial *999 (STAR NINE NINE NINE)
- Enter your password. (usually your zip code) followed by the # (POUND)
- Wait for the system to say, "To receive the message"
- Then dial 6 (for other features)
- Then dial 3 (to set the clock)
- Then dial 1 (to change the time)
- Enter the time followed by a # (POUND) Example for 9:37 is---Enter 937#
- The system will ask for 1 for AM or 2 for PM
- Enter the correct digit
- The system will ask for 1 to change or 2 to accept
- Enter 2 (to accept)
- Hang up